

Libraries Documents A22 2.0 Envoy Picts Envoy Backup files

Organize Open Share with E-mail Burn New folder

Documents library
Envoy Backup files

Arrange by: Folder

Name	Date modified	Type	Size
Schemm	11/13/2013 10:01 ...	File folder	
Sunrich	8/14/2014 8:40 AM	File folder	
V3.02	12/5/2013 9:38 AM	File folder	
v3.02A	12/4/2013 8:26 AM	File folder	
Valcke	3/11/2014 11:43 A...	File folder	
...

- Save the attached compressed file (.zip) to a location that is easy to find, such as, the computer desktop or download folder
- Open the location of the saved file
- Insert an empty USB drive into a USB port on the computer

Oasis Lanes - MO	6/12/2013 9:28 AM	Microsoft Word D...	16
Pattern 14 (flat pattern)	7/16/2013 10:05 A...	JPEG Image	80
update - All Languages	4/26/2012 11:54 A...	Compressed (zipp...	471
update reset	5/14/2012 2:43 PM	Compressed (zipp...	2
update	12/1/2011 9:29 AM	Compressed (zipp...	2
update_3-02c	6/27/2014 1:43 PM	Compressed (zipp...	4,022
update_3-02d	10/13/2014 2:23 PM	Compressed (zipp...	4,022
update_v3-01af	8/23/2012 11:44 A...	Compressed (zipp...	4,016
update_v3-02g	1/23/2015 4:40 PM	Compressed (zipp...	4,024
update_v3-02h	3/27/2015 4:16 PM	Compressed (zipp...	4,024
V3.02	10/17/2012 3:48 PM	Compressed (zipp...	4,016

update_v3-02h
Compressed (zipped) Folder
Date modified: 3/27/2015 4:16 PM
Size: 3.92 MB
Date created: 3/27/2015 4:16 PM

Libraries Documents A22 2.0 Envoy Picts Envoy Backup files

Organize Open Share with E-mail Burn New folder

Documents library

- Right-click the file folder and select “Extract All” (or equivalent selection in your native language)
- WARNING! Don not “Cut” or “Copy” the file to the USB drive. This will cause the software update to become corrupt and possibly cause the GUI to fail!**

varcke

6 Lane Back

6 Lane Hou

8dc0270a-t

3223backu

Backup (Wi

backup env

Oasis Lanes

Pattern 14

update - A

update res

update

update_3-0

update_3-0

update_v3-

update_v3-

update_v3-02h

V3.02

Open

Open in new window

Extract All...

Scan for viruses

Open with

Share with

Restore previous versions

Send to

Cut

Copy

Create shortcut

Delete

Rename

Open folder location

Properties

3/11/2014 11:43 A... File folder

6/25/2015 9:33 AM Compressed (zipp... 97

4/28/2015 11:29 A... Microsoft Excel 97... 49

1/20/2014 8:27 AM Compressed (zipp... 4,021

2/3/2015 12:44 PM Compressed (zipp... 27

12/9/2013 12:40 PM PNG Image 460

2/20/2014 7:59 AM Compressed (zipp... 155

6/12/2013 9:28 AM Microsoft Word D... 16

7/16/2013 10:05 A... JPEG Image 80

4/26/2012 11:54 A... Compressed (zipp... 471

5/14/2012 2:43 PM Compressed (zipp... 2

12/1/2011 9:29 AM Compressed (zipp... 2

6/27/2014 1:43 PM Compressed (zipp... 4,022

10/13/2014 2:23 PM Compressed (zipp... 4,022

8/23/2012 11:44 A... Compressed (zipp... 4,016

1/23/2015 4:40 PM Compressed (zipp... 4,024


3/27/2015 4:16 PM Compressed (zipp... 4,024

10/17/2012 3:48 PM Compressed (zipp... 4,016

update_v3-02h Date modified: 3/27/2015 4:16 PM Date created: 3/27/2015 4:16 PM

Compressed (zipped) Folder Size: 3.92 MB

- Select "Browse..." in the extraction window and select the destination where the USB drive is located, then click "OK"

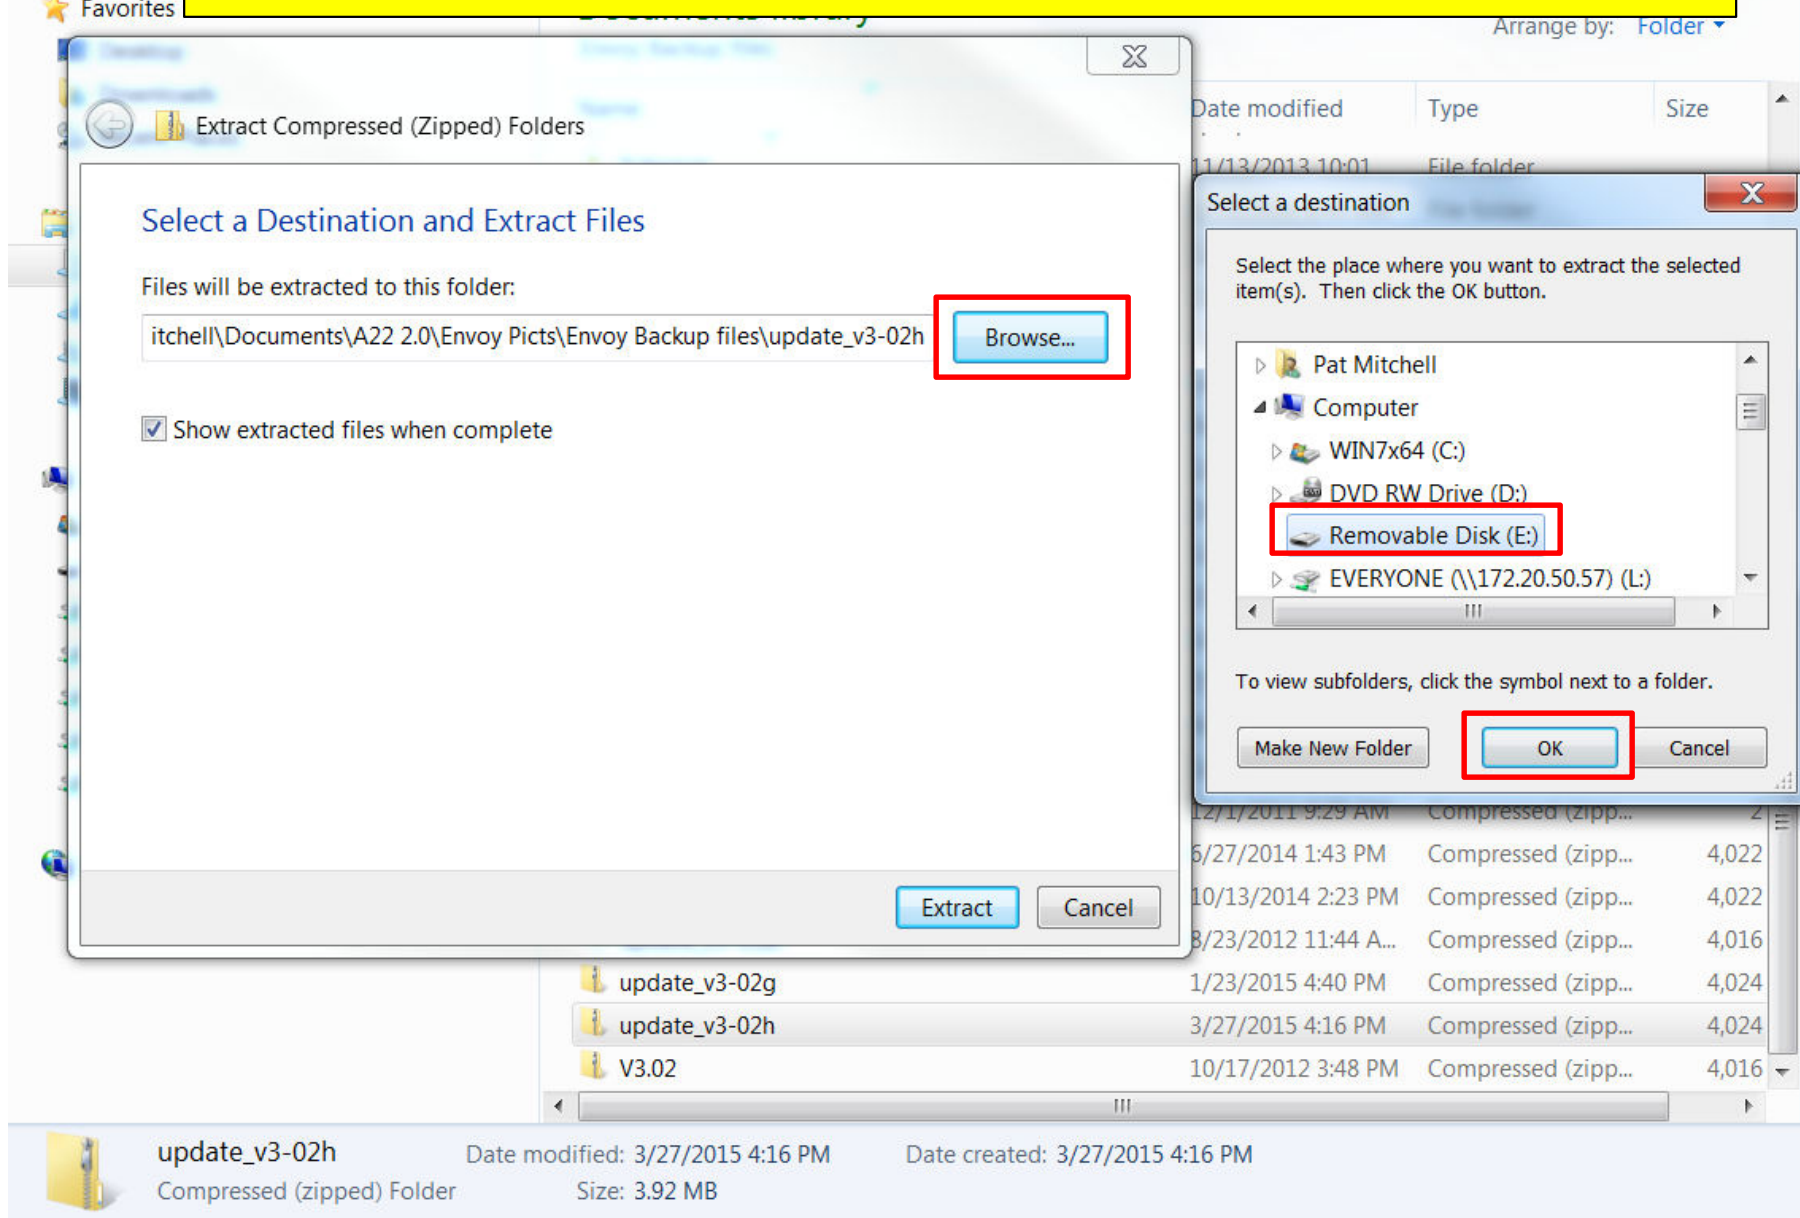

- Verify the destination is correct then click Extract

Organize

Documents library

Arrange by: Folder

Extract Compressed (Zipped) Folders

Select a Destination and Extract Files

Files will be extracted to this folder:

E:\

Browse...

☒ Show extracted files when complete


Extract Cancel

Date modified	Type	Size
11/13/2013 10:01 ...	File folder	
8/14/2014 8:40 AM	File folder	
12/5/2013 9:38 AM	File folder	
12/4/2013 8:26 AM	File folder	
3/11/2014 11:43 A...	File folder	
5/25/2015 9:33 AM	Compressed (zipp...	97
4/28/2015 11:29 A...	Microsoft Excel 97...	49
1/20/2014 8:27 AM	Compressed (zipp...	4,021
2/3/2015 12:44 PM	Compressed (zipp...	27
12/9/2013 12:40 PM	PNG Image	460
2/20/2014 7:59 AM	Compressed (zipp...	155
5/12/2013 9:28 AM	Microsoft Word D...	16
7/16/2013 10:05 A...	JPEG Image	80
4/26/2012 11:54 A...	Compressed (zipp...	471
5/14/2012 2:43 PM	Compressed (zipp...	2
12/1/2011 9:29 AM	Compressed (zipp...	2
5/27/2014 1:43 PM	Compressed (zipp...	4,022
10/13/2014 2:23 PM	Compressed (zipp...	4,022
8/23/2012 11:44 A...	Compressed (zipp...	4,016
1/23/2015 4:40 PM	Compressed (zipp...	4,024
3/27/2015 4:16 PM	Compressed (zipp...	4,024
10/17/2012 3:48 PM	Compressed (zipp...	4,016

update_v3-02g
update_v3-02h
V3.02

update_v3-02h
Compressed (zipped) Folder
Date modified: 3/27/2015 4:16 PM
Size: 3.92 MB
Date created: 3/27/2015 4:16 PM

- The files in the compressed folder will be extracted to the USB drive and should take less than 30 seconds

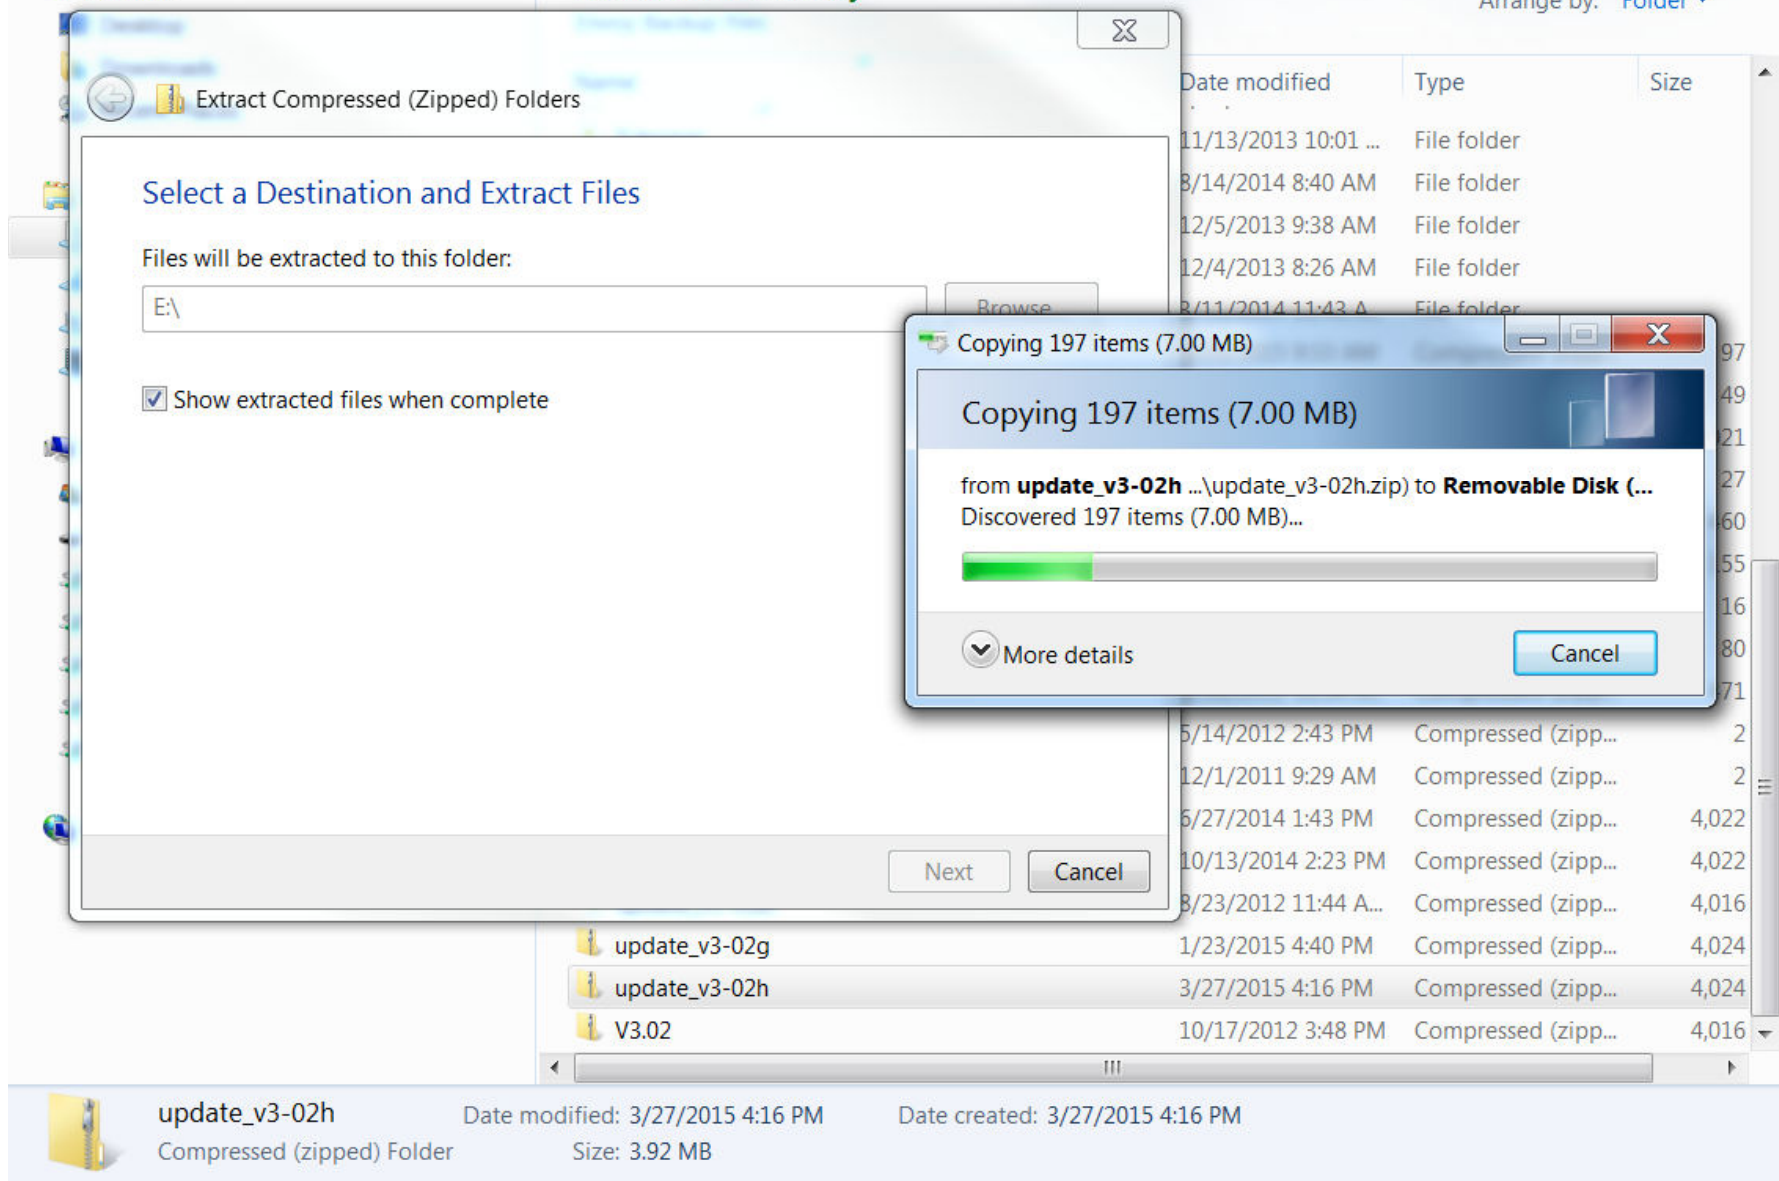

Libraries Documents A22 2.0 Envoy Picts Envoy Backup files

Computer Removable Disk (E:)

Search Removable Disk (E:)

Organize Share with Burn New folder

Favorites Desktop Downloads Recent Places

Libraries Documents Music Pictures Videos

- A window will open showing the file folder on the USB drive
- Safely remove the USB drive from the computer

Removable Disk (E:)

update

EVERYONE (\\172.20.50.57) (L:)

Pat.Mitchell (\\172.20.50.57\PRIVATE) (

RESTRICTED (\\172.20.50.57) (R:)

RESTRICTED (\\BBMSKENG01) (V:)

APPS (\\172.20.50.57) (X:)

1 item

update_v3-02h Date modified: 3/27/2015 4:16 PM Date created: 3/27/2015 4:16 PM

Compressed (zipped) Folder Size: 3.92 MB

Operator Pattern System Maintenance

Center

Machine

Security

Conditioner

User Interface: 3.02
Machine Controller: 1.02

Serial Number: E3861
ID:

- In the System/Machine screen you will see the current version of the GUI software
- Insert the USB drive into the GUI (it may take a few seconds for the GUI to read the USB drive)

2.6.31-22-generic

Navigation buttons: Left arrow, Right arrow, Up arrow, Down arrow


Exit OK

Aug 06, 2015 07:54:06 Configuration

WARNING

The GUI software is about to be updated. The current data may not be compatible with the new software.

- A warning message will appear informing the user that a software update is available
- Press OK on the GUI to begin the software update




Update Software



Cancel

- The GUI screen will briefly show the message below and begin the reboot of the software when complete
- Do not remove the USB drive until the software has completely booted and displays the operators screen

Updating Software

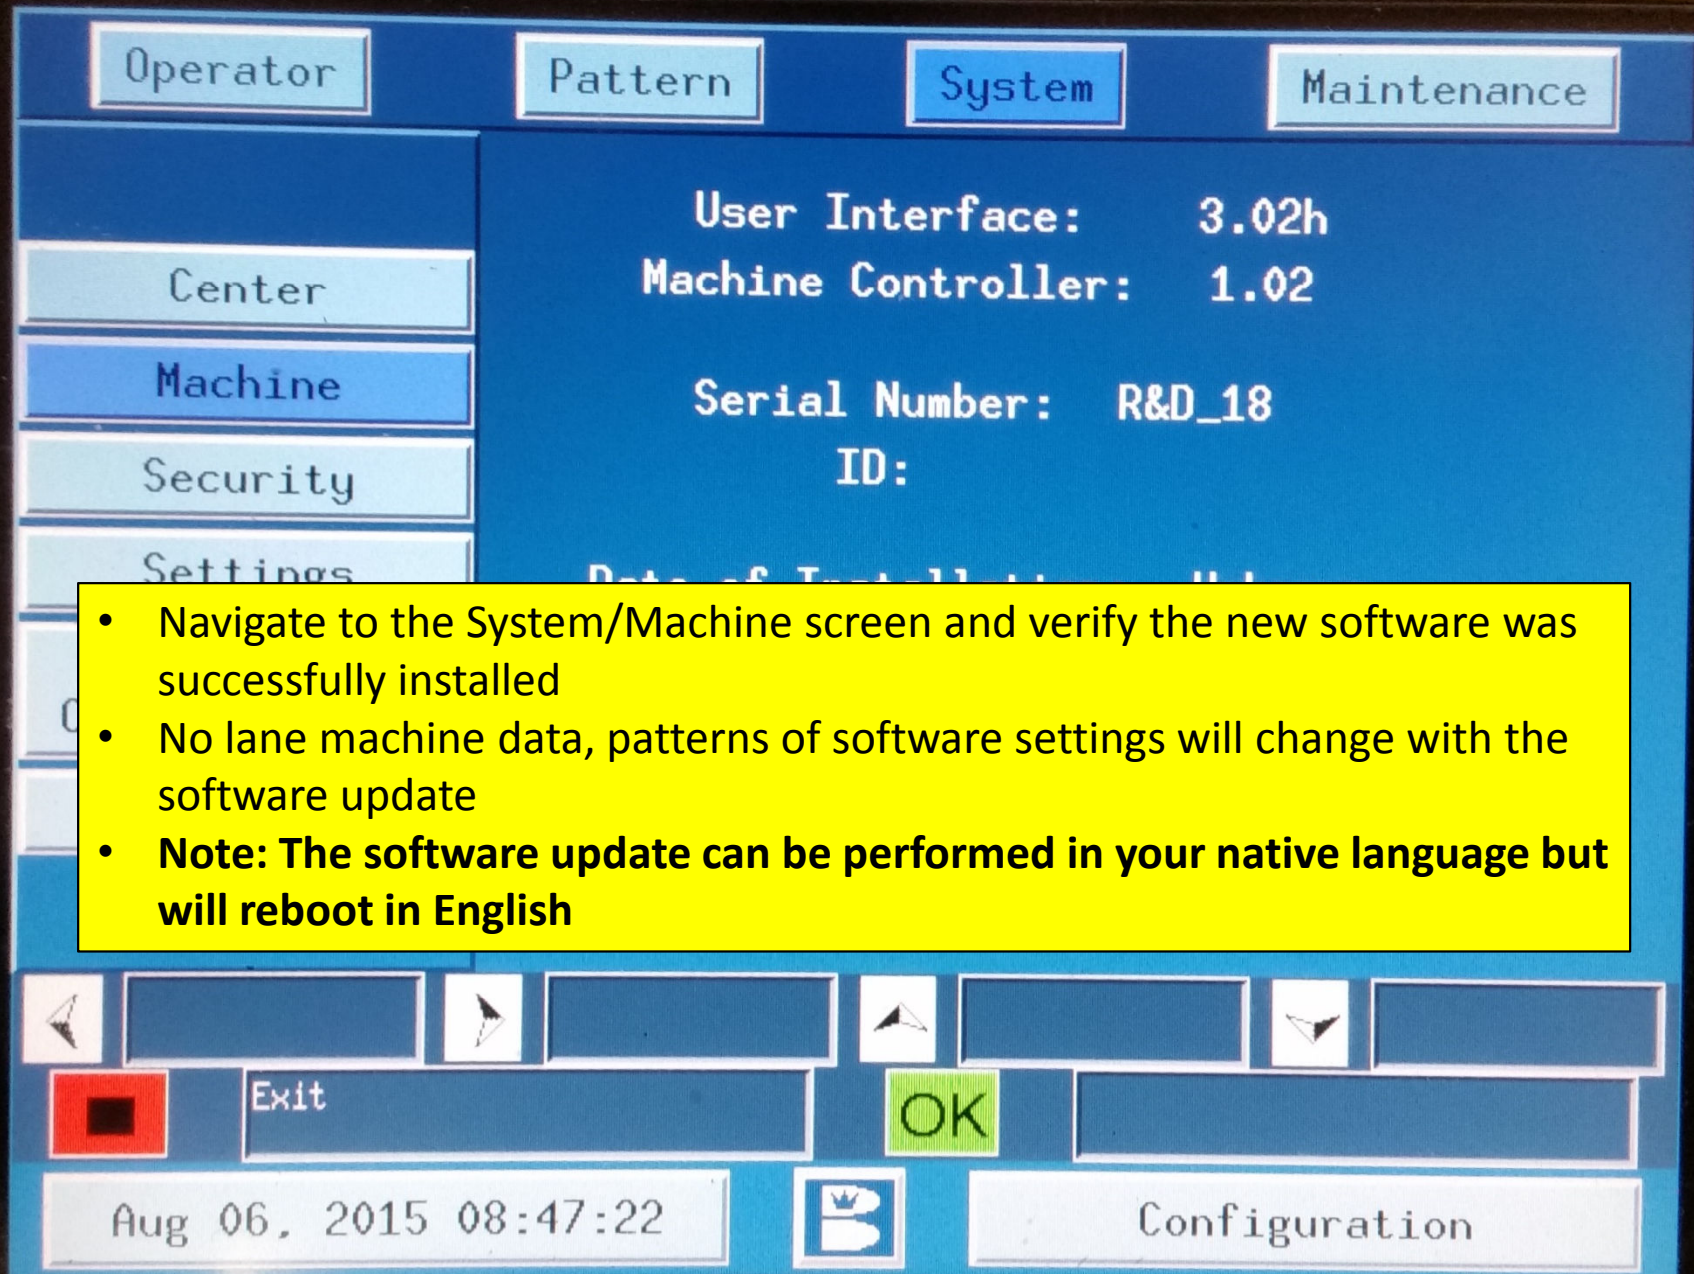

- Navigate to the System/Machine screen and verify the new software was successfully installed
- No lane machine data, patterns of software settings will change with the software update
- **Note: The software update can be performed in your native language but will reboot in English**